



## Driver Installation for NF DAC

### Windows

- (1) Connect NF DAC with PC with enclosed USB cable in the packing box
  - (2) Power on NF DAC.
  - (3) Put the enclosed installation CD in the PC and double click "setup.exe" file in the XMOS\_drivers folder in the CD drive. (This CD doesn't support auto installation)
- or
- Download XMOS\_driver.zip file from the download page in the Lead Audio website and double click "setup.exe" file after unzip.
- (4) If the driver is not installed, please power-off and power-on NF DAC then repeat (3).
  - (5) Go to "Sound and Audio set up" in the "Control Panel" of Windows and select xmos output 2.0 as a sound output equipment.
  - (6) Check your Audio player whether it requires change of output equipment setting.  
-> choose XMOS
  - (7) Enjoy listening NF DAC

### Mac

- (1) Connect NF DAC with PC with enclosed USB cable in the packing box
- (2) Power on NF DAC
- (3) Go to the setup of MAC and check whether XMOS has been detected automatically
- (4) If it is not detected, please Power-off and Power-on again.
- (5) You will see error message "uncontrollable equipment" or similar. Please ignore it.
- (6) Check your Audio player whether it requires change of output equipment setting.  
-> choose XMOS.
- (7) Enjoy listening NF DAC